PREMIER®

MANUAL DE INSTRUCCIONES
PARLANTE ACTIVO C/USB Y SD (15")
BB-4132USDR

ESTIMADO CLIENTE
Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

PRECAUCIÓN

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA

Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.

Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad que constituye un riesgo de choque eléctrico.

Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

ÍNDICE

INSTRUCCIONES DE SEGURIDAD **2**
DESCRIPCIÓN DE LA UNIDAD **3**
CONTROLES DEL REPRODUCTOR DE AUDIO DIGITAL 4
ESPECIFICACIONES **5**
DIAGRAMA DE CIRCUITOS **5**

⚠INSTRUCCIONES DE SEGURIDAD

- Lea atentamente las siguientes instrucciones de seguridad, con el fin de evitar lesiones personales o daños en la unidad.
- No use la unidad cerca de baños, bañeras, piscinas ó cerca de cualquier lugar húmedo.
- Esta unidad es solo para ser montada en una caja de sonido woofer para formar un juego completo.
- Evite usar la unidad con un volumen muy alto por periodos de tiempo prolongados, ya que esto puede causar perdida de audición. Si llega a presentar perdida de audición, recomendamos que consulte un especialista.
- Ubique la unidad en un lugar ó en una posición en la que no se bloqueen las salidas de ventilación.
- Esta unidad debe ser ubicada lejos de fuentes de calor o de los rayos directos del sol.
- La unidad debe ser conectada a un tomacorriente que cumpla con las especificaciones dadas en las instrucciones de operación o como esta marcado en el panel de la unidad.
- Desconecte el cable de energía del tomacorriente cuando no vaya a usar la unidad.
- Evite insertar objetos a través de las rejillas de ventilación de la unidad.
- Evite que le salpique agua o cualquier otro liquido a la unidad.
- Contacte un agente de servicio calificado cuando suceda lo siguiente:
    - El cable de energía o en el enchufe han sido dañados
    - Objetos o líquidos han caído en el interior de la unidad
    - La unidad ha sido expuesta a la lluvia
    - La unidad no opera normalmente ó han aparecido cambios en su rendimiento
    - La unidad ha sido golpeada ó su cubierta se ha dañado
- Servicios de reparación o mantenimiento deben ser realizados por personal técnico calificado

DESCRIPCIÓN DE LA UNIDAD

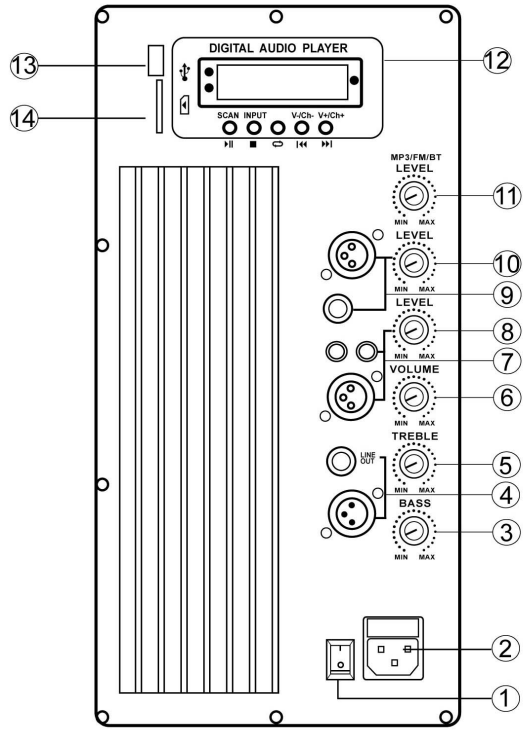

1. Interruptor de encendido y apagado de la unidad. Asegúrese que el control de nivel de volumen Maestro de la unidad este abajo antes de encenderla
2. Fusible y AC: Conector de potencia con soporte del fusible
3. Ajuste de Bajos
4. Salida de línea
5. Ajuste de agudos
6. Nivel de volumen
7. Entradas de línea
8. Nivel de entrada
9. Entradas de micrófono

10. Nivel del micrófono
11. Control de volumen de MP3/FM/Bluetooth
12. Reproductor de audio digital incorporado: Permite reproducir archivos de música desde un dispositivo USB/SD, radio FM y recibir señal de audio vía Bluetooth.
13. Puerto USB
14. Ranura para tarjetas SD/MMC

NOTA: La unidad soporta dispositivos de memoria USB/SD/MMC de hasta 4GB

CONTROLES DEL REPRODUCTOR DE AUDIO DIGITAL

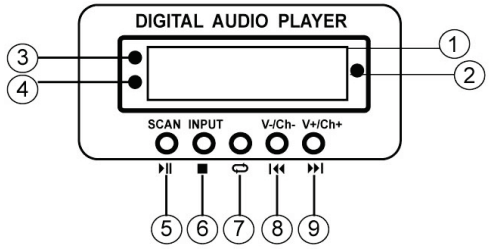

1. Pantalla LED
2. Receptor del control remoto
3. LED indicador de funcionamiento (Verde)
4. LED indicador de potencia (Rojo)
5. Reproducir y Pausar en modo MP3 / Función de búsqueda en modo de radio FM
6. Detener en modo MP3 / Entrada para seleccionar modo
7. Repetición en modo MP3
8. Volumen- con una presión prolongada / Pista anterior presionando una vez
9. Volumen+ con una presión prolongada / Siguiente pista presionando una vez

Instrucciones de uso del reproductor de audio MP3 / Radio FM / Bluetooth

1. Para bluetooth, presione el botón “INPUT” (Entrada para seleccionar modo), seleccione “AUX mode” (Modo Auxiliar), active el bluetooth del dispositivo de audio y busque nuevos dispositivos. Conecte al reproductor de audio (GUGO11), ingrese la contraseña “0000” para permitir la conexión. Luego reproduzca la música que desee.
2. Para Radio FM, presione el botón “INPUT” (Entrada para seleccionar modo), seleccione “RADIO mode” (Modo de radio). Presione el botón de búsqueda para buscar estaciones y guardar en las memorias automáticamente. Presione los botones CH- / CH+ para elegir su estación radial FM favorita.
3. Para audio MP3, presione el botón “INPUT” (Entrada para seleccionar modo), seleccione “DIGITAL AUDIO PLAYER mode” (Modo de Reproductor de audio digital) y presione el botón reproducir / pausar para iniciar la preproducción.
4. Presione el botón “INPUT” (Entrada para seleccionar modo) por 3 segundos para apagar el reproductor de audio digital, presiónelo de nuevo para encenderlo.

ESPECIFICACIONES

Woofer	15”, Imán: 60OZ
Tweeter	44mm, iman: 23OZ
RMS	180 Vatios
PMPO	6000 Vatios
Frecuencia “Crossover”	3,5KHz
Rango de frecuencia:	50Hz – 20KHz
Voltaje:	AC110/220V, 50/60Hz
Peso	23Kg
Dimensiones	51 x 48 x 75cm

DIAGRAMA DE CIRCUITOS

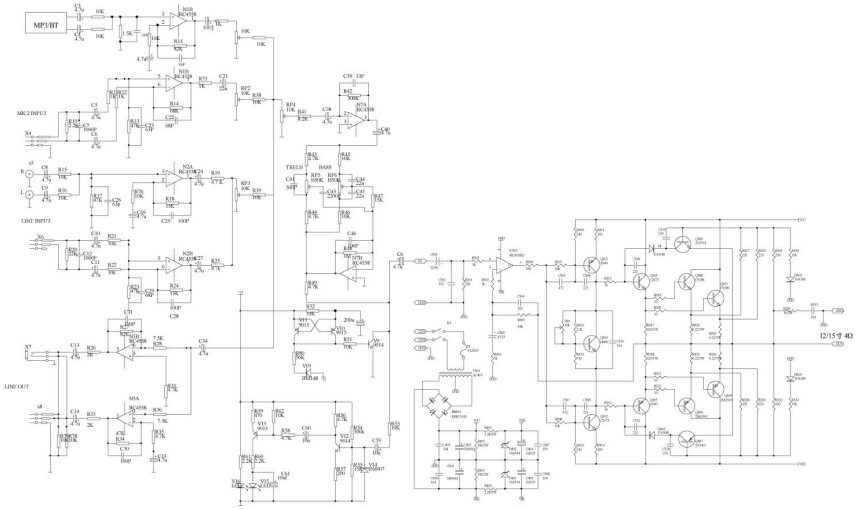

PREMIER®

INSTRUCTION MANUAL

BLUETOOTH & USB/SD COMPATIBLE SPEAKER BOX

BB-4132USDR

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS

WARNING -- When using electric products, basic precautions, should always befollowed, Including the Following:

Read all this instructions before using the product

Do not use this product near water ,for example, near a bathtub ,washbowl,kitchen sink, In a wet basement ,or near a swimming pool,or the like.

This product only for mounting into a woofer sound box to form complete set

This product , in combination with other sound equipments and headphones or speakers, may be capable of producing soud levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level tha is uncomfortable. If you experience any hearing loss or ringing in the ears ,you should consult an audiologist.

The products should be located so that its location or position does not interfere with its proper Ventilation.

The product should be located away from heat sources such as radiators,heat resistors or other products that produce heat.

The product should be connected to a power supply only of the type described in the operating Instructions or as marked on the panel of the product.

The power supply cord of the products should be unplugged from the outlet when left unused for a long period of time.

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

The product should be serviced by qualified service personnel when:

1. The power supply cord or the plug has been damaged or
2. Objects have fallen, or liquid has been spilled into the product;or
3. The product has been exposed to rain;or
4. The product does not appear to aperate normally or exhibits a marked change in performance;or
5. The product has been dropped, or the enclosure damaged

Do not attempt to service the product beyond that described in the user-maintenance instructions. All other servicing should be referred to quality service personnel.

CAUTION

Used for instructions intended to alert the user to the risk of injury or material damage should the the unit be used improperly.

Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings ,as well to domestic animals or pets.

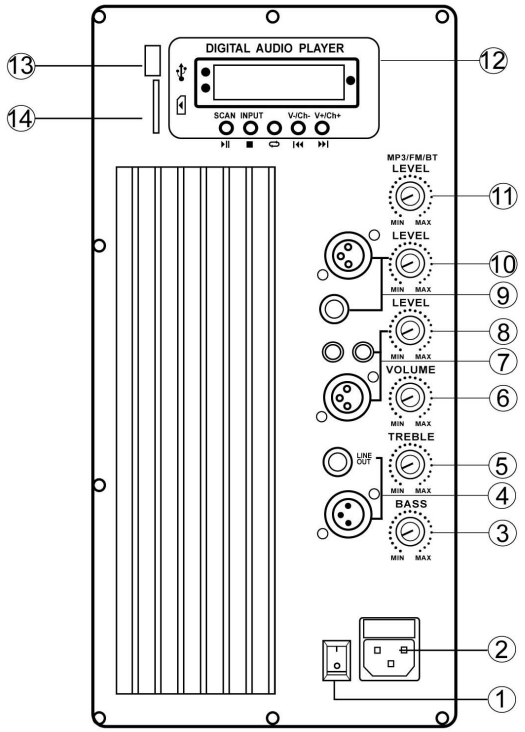

1. POWER Switch
Switch up to turn the unit on, and switch down to turn it off.
Make sure the MASTER level control is down before you turn the unit on.

2. FUSE & AC
This is a power socket with FUSE holder.

3. EQ-Bass
Controls for adjusting Bass effect.

4. LINE OUT
These sockets send out line signals,which fetched before frequency equalizer and master fader,used for linking to another active speaker like this unit or for recording.

5. EQ-Treble
This knob adjust Treble effect.

6. Volume LEVEL
Controls for adjusting whole level.

7. LINE inputs
Line inputs can accept line level signals a stereo RCA sockets and a XLR connection, one built-in music player has been linked to this line inputs inside.

8. Input LEVEL
Controls for adjusting LEVEL

9. MIC inputs
MIC inputs can accept line level signals a stereo 1/4" PHONE JACK and a XLR connection.

10. MIC LEVEL
Controls for adjusting MIC input

11. MP3/FM/BLUETOOTH LEVEL
Controls for adjusting volume level.

12. Built-in digital audio player
This unit allow playing USB/SD music files, FM radio, and receive bluetooth audio signal to play in speaker box.

13. USB port
This unit built-in a music player, U disk which loaded many songs easily via this port.

14. SD/MMC port
This unit built-in a music player, SD/MMC card which loaded many songs easily via this port.

NOTE : USB/SD/MMC can support the memory device up to 4GB.

DIGITAL AUDIO PLAYER CONTROLS:

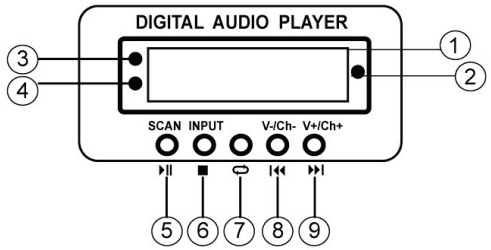

1. LED display

2. Remote receiver

3. LED light (Green) Working indicate

4. LED light (Red) Power indicate

5. Play/ Pause function under MP3 mode / Scan function under FM mode

6. Stop function under MP3 mode / Input to select mode function

7. Repeat function under MP3 mode

8. Volume - function with long press / Previous track with short press

9. Volume + function with long press / Next track with short press

Bluetooth / FM radio / MP3 audio player use instructions:

1. For Bluetooth, Press INPUT Button, set at AUX mode, Open Bluetooth audio device, Searching new devices, connecting to Bluetooth music player (GUGO11 Player), enter password "0000" to permit connecting. Play music in bluetooth audio device, the speaker box will play.

2. For FM radio, press INPUT Button, set at RADIO mode, Press Scan button to have automatic researching Channels, and save into memories automatically。 Press CH- / CH+ to choose your favour FM Channels.

3. For MP3 audio, press INPUT Button, set at DIGITAL AUDIO PLAYER mode, Press [redacted] key to play music.

4. Press INPUT Button 3secs to off digital audio player, press again to on.

SPECIFICATIONS:

Woofer:	15", magnet: 60OZ,
Tweeter:	44mm, magnet: 23OZ,
Power RMS:	180W
Max power (PMPO):	6000W
Crossover Frequency:	3,5KHz
Frequency Range(-10Db)	50Hz-20KHz
Voltage:	AC110/220V, 50/60Hz
Weight:	23Kg
Dimensions:	51*48*75cm

Schematic diagram